

INSECTRONIC-050

Mini fly killer

Instruction manual


IMPORTANT


Before to use the product, please read carefully this manual to avoid any malfunction. The info in this manual is shown as reference. Due to updates can exist differences. Consult our website www.steren.com to obtain the current version of this manual.

A CAUTIONS

- This product is NOT a toy; keep it away from children.
- This device cannot be used by people with different abilities, unless they have preparation and supervision
- Don't introduce any object into the grills.
- · Remove the device from the socket before to make any cleanness.
- Don't use abrasive liquids to clean it.
- If you require a replace, please refer to an authorized dealer.

HOW TO USE

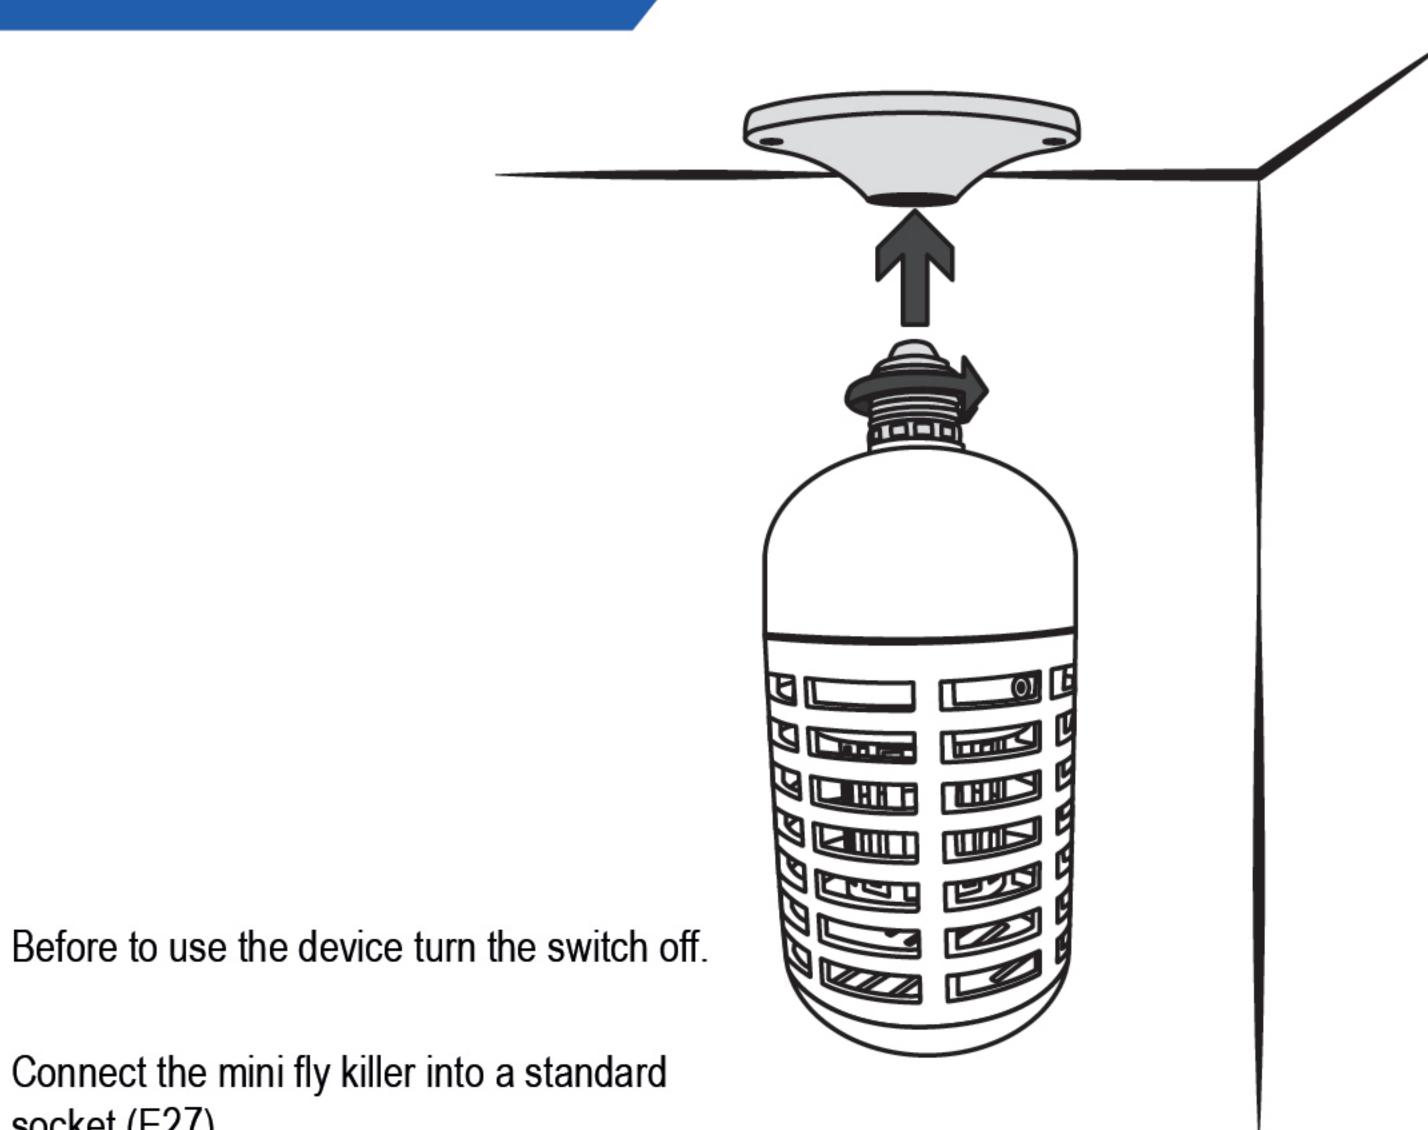


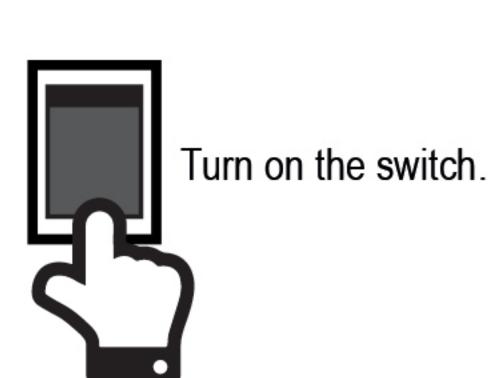

Turn off any lamp in the room, for better function


MAINTENANCE AND CLEANNESS

Don't try to remove any insect from the grills while the device is working.

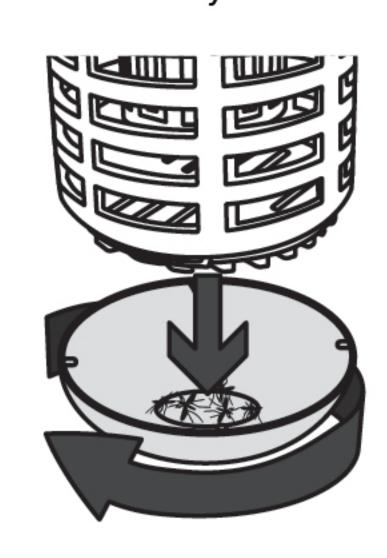

socket (E27).

1. Turn the tray in clockwise.

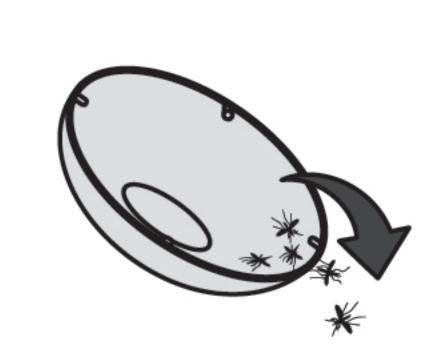

2. Remove and clean out. Use a dry and soft cloth to clean the waste.



3. Place the tray again.

SPECIFICATIONS

Specifications may change without notice

Input: 120 V~ 60 Hz 4 W Consumption: 4W/h

Stand by power consumption: not applicable

For E27 socket



Custome Service Center









STEREN

Product: Mini fly killer

Part number: INSECTRONIC-050 Brand: Steren

WARRANTY

This Steren product is warranted under normal usage against defects in workmanship and materials to the original purchaser for one year and three months on its lamp from the date of purchase.

CONDITIONS

- 1. This warranty card with all the required information, invoice, product box or package, and product, must be presented when warranty service is required.
- 2. If the product is in the warranty time, the company will repair it free of charge.
- 3. The repairing time will not exceed 30 natural days, from the day the claim was received.
- 4. Steren sell parts, components, consumables and accessories to customer, as well as warranty service, at any of the addresses mentioned later.

THIS WARRANTY IS VOID IN THE NEXT CASES: If the product has been damaged by an accident, acts of God, mishandling, leaky batteries, failure to follow enclosed instructions, improper repair by unauthorized personnel,

a) The consumer can also claim the warranty service in the purchase establishment.

b) If you lose the warranty card, we can reissue it, if you show the invoice or purchase ticket.

RETAILER INFORMATION

Name of the retailer _____